

Setting a new number combination and opening/closing the VHS 623(H)

- 1) To open the lock for the first time, set the number combination 0-0-0-0-0. Press the shackle down, then open the lock.
- 2) Now set your own number combination (note: setting is only possible when the lock is open); a. Insert the supplied reset key into the hole on the side and turn it 90 degrees.
- b. Now set your own 4-digit number combination (please do not forget to make a note
 of your new number combination).
 c. Remove the reset key.
- 3) Open the VHS 623(H) by entering your 4-digit number combination and pressing down on the handle.







